


For fixing the floor mount bracket you need a minimum of 5inch [12.5cm] deep concrete pad

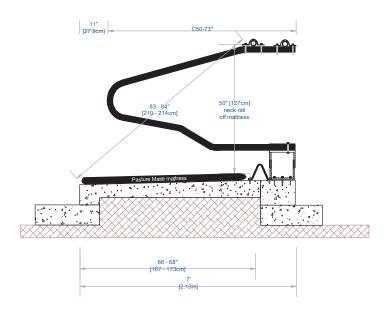











TITLE: The Floor Mount Bracket | REVISION:

DETAILS:


C50-73" for 7ft [2.13m] single row and 14ft [4.27m] head to head


Wilson Agriculture


Agri Dairy Housing Specialists
www.wilsonagri.co.uk

Scale: 1:35 DRAWN BY:

lvor Davey ivor@wilsonagri.co.uk

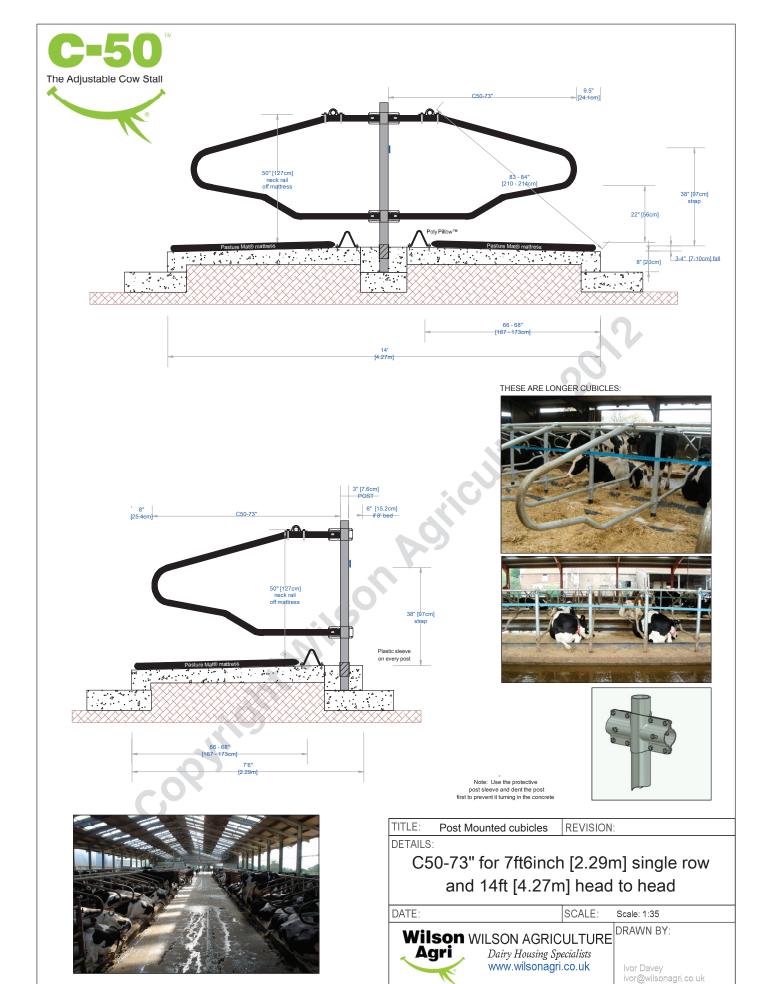

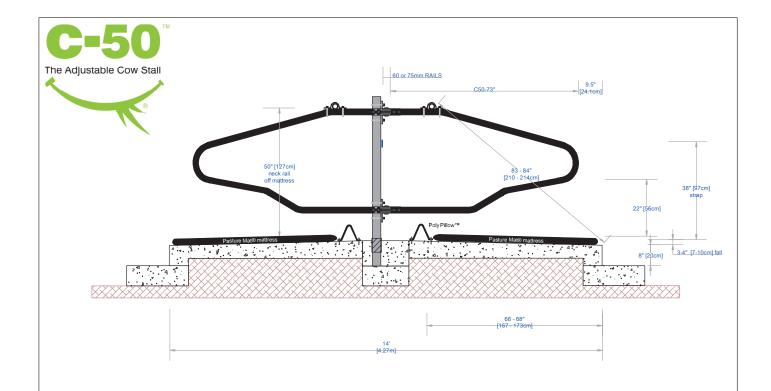

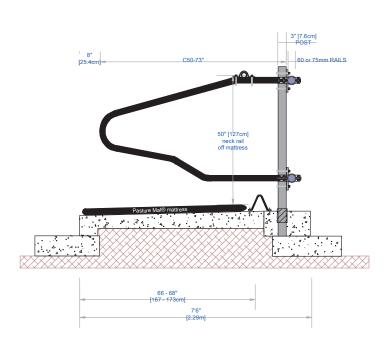





Note: Use the protective post sleeve and dent the post first to prevent it turning in the concrete

NOTES:

Adjust measurments according to different bed lengths.

The back of the cubicle needs to be between 6 & 14 inches [15 & 36cm] from the heel curb.

RAILS CAN BE EITHER 75mm OR 60mm DEPENDING ON SPAN REQUIRED.

RAILS CAN BE FIXED TO STANCHIONS IF AVAILABLE.

RAILS ARE NOT PREFERRED IF MAXIMISING COW COMFORT. WE PREFER POST OR FLOOR MOUNTED CUBICLES.

TITLE: Rail Mounted cubicles

REVISION:

TEVIOLOTI.

C50-73" for 7ft6inch [2.29m] single row and 14ft [4.27m] head to head

DATE:

DETAILS:

SCALE:

Scale: 1:35

DRAWN BY:

Wilson WILSON AGRICULTURE

Agri

Dairy Housing Specialists

www.wilsonagri.co.uk

Ivor Davey ivor@wilsonagri.co.uk