

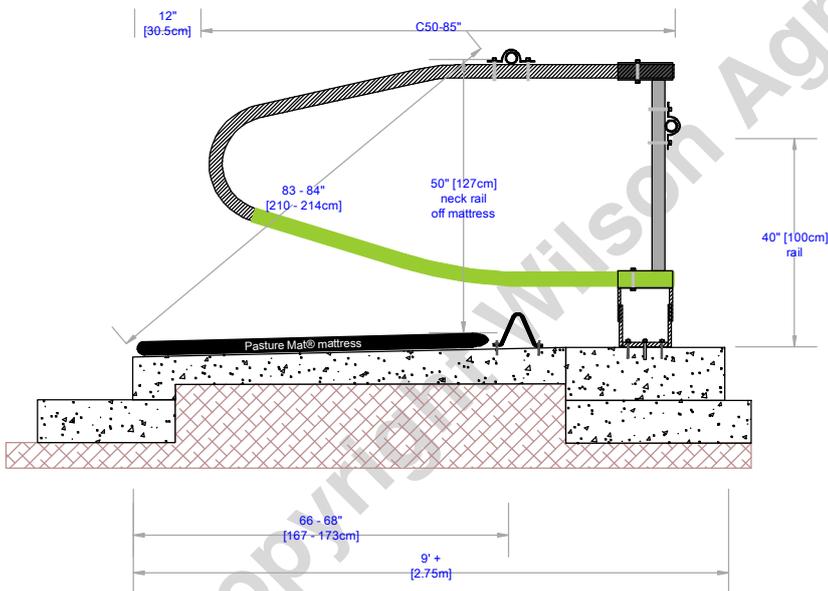
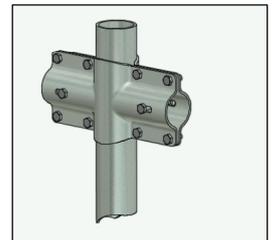


For fixing the floor mount bracket you need a minimum of 5inch [12.5cm] deep concrete pad

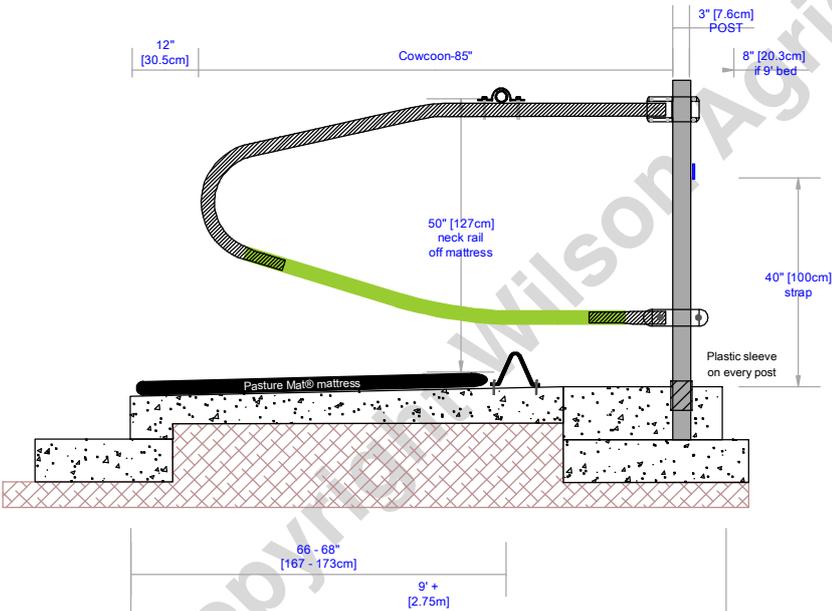

TITLE: The Floor Mount Bracket	REVISION: Cowcoon
DETAILS: Cowcoon-85" for 9ft + [2.75m] single row and 16ft6inch [5029] head to head	
DATE:	SCALE: Scale: 1:35
 WILSON AGRICULTURE Dairy Housing Specialists www.wilsonagri.co.uk	DRAWN BY: Ivor Davey ivor@wilsonagri.co.uk

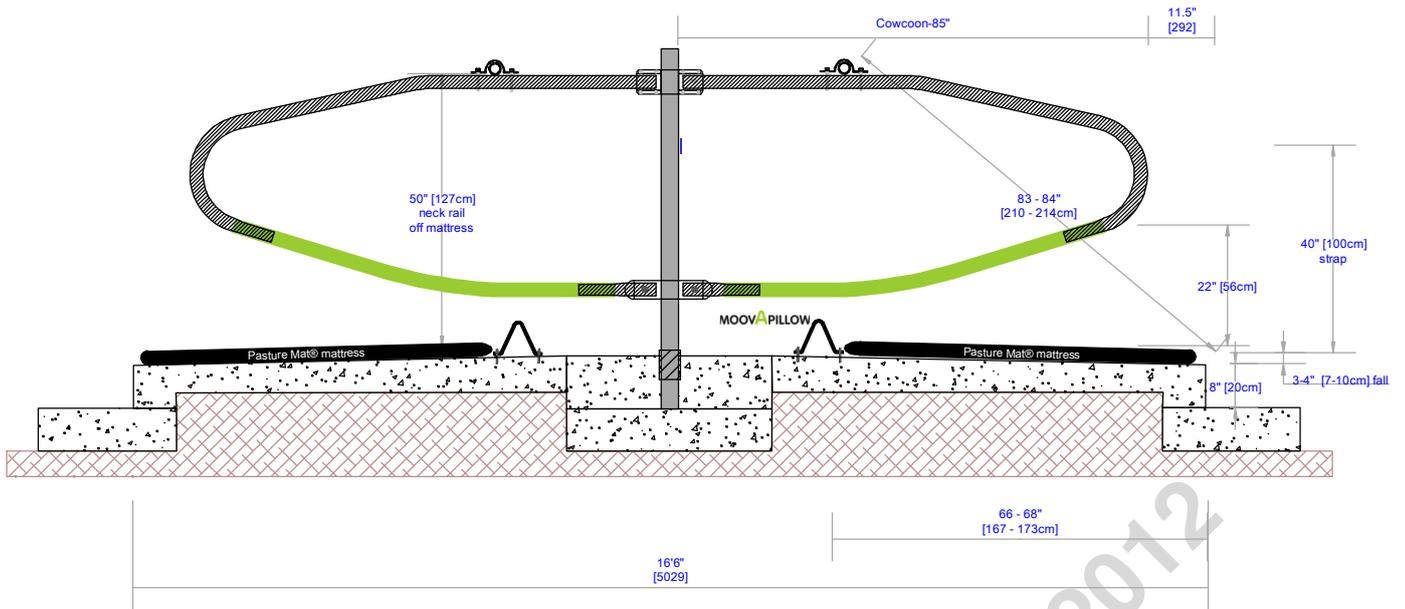

Note: Use the protective post sleeve and dent the post first to prevent it turning in the concrete



TITLE: Post Mounted cubicles	REVISION: Cowcoon
DETAILS: Cowcoon-85" for 9ft + [2.75m] single row and 16ft6inch [5029] head to head	
DATE:	SCALE: Scale: 1:35
 WILSON AGRICULTURE Dairy Housing Specialists www.wilsonagri.co.uk	DRAWN BY: Ivor Davey ivor@wilsonagri.co.uk