

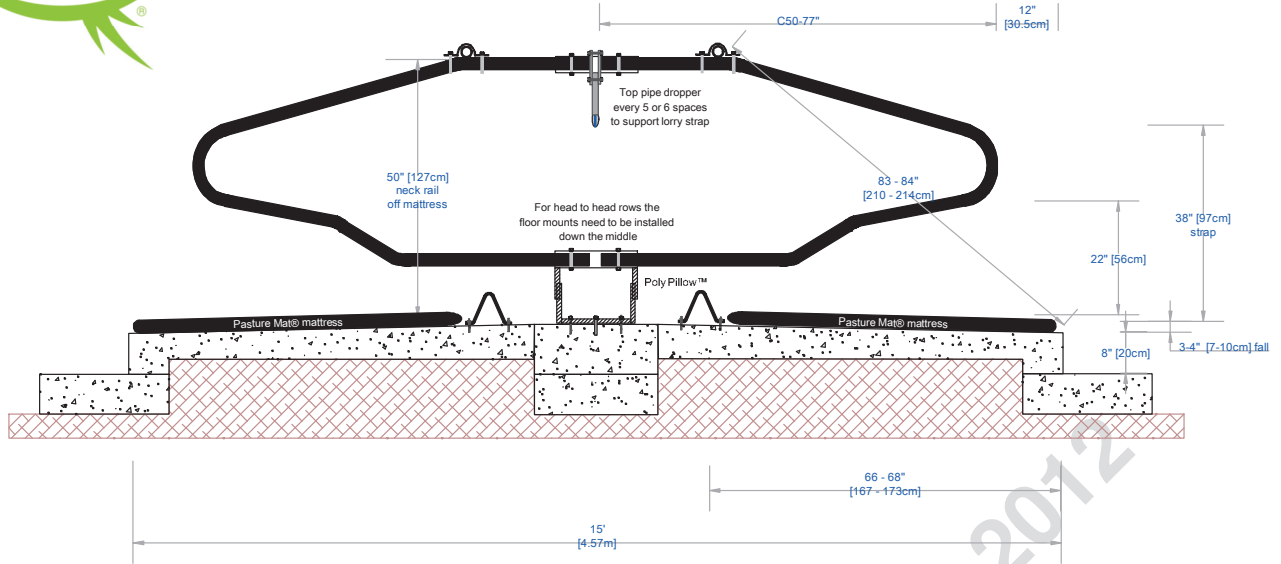


C-50™

The Adjustable Cow Stall

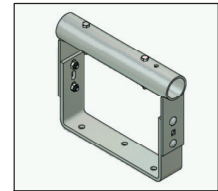




For fixing the floor mount bracket you need a minimum of 5inch [12.5cm] deep concrete pad

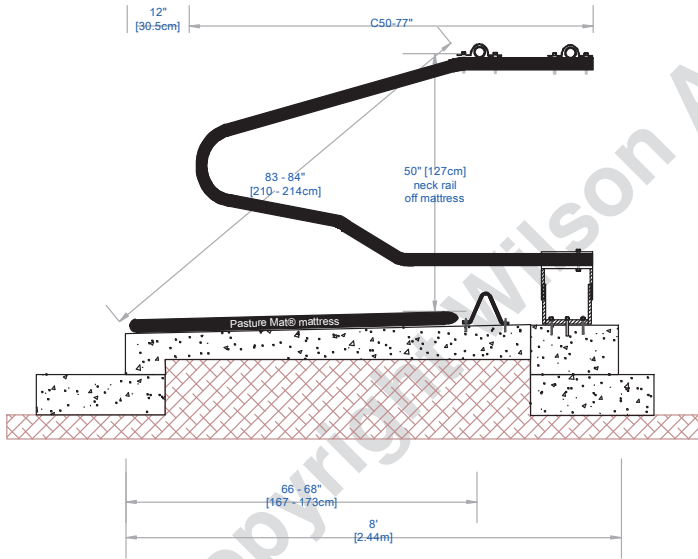

TITLE: The Floor Mount Bracket		REVISION:
DETAILS: C50-77" for 8ft [2.44m] single row and 15ft [4.57m] head to head		
DATE:	SCALE:	Scale: 1:35
Wilson Agri WILSON AGRICULTURE Dairy Housing Specialists www.wilsonagri.co.uk		DRAWN BY: Ivor Davey ivor@wilsonagri.co.uk


C-50™

The Adjustable Cow Stall

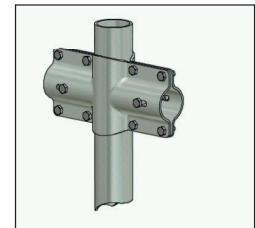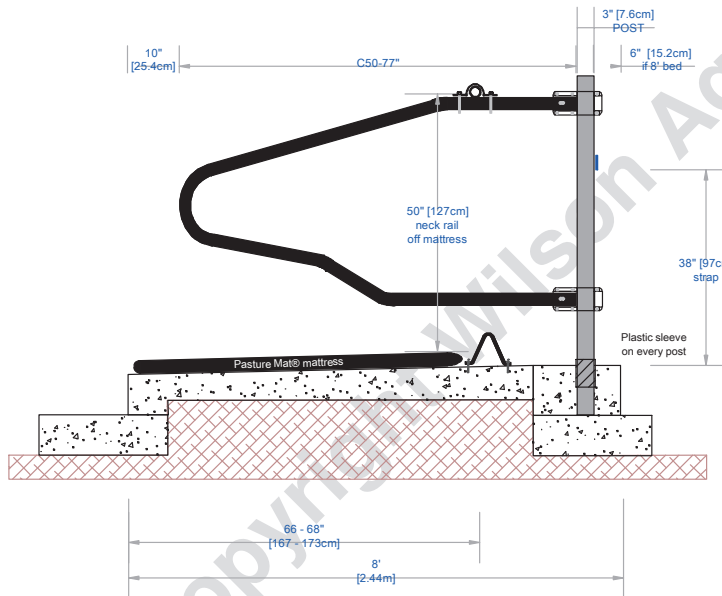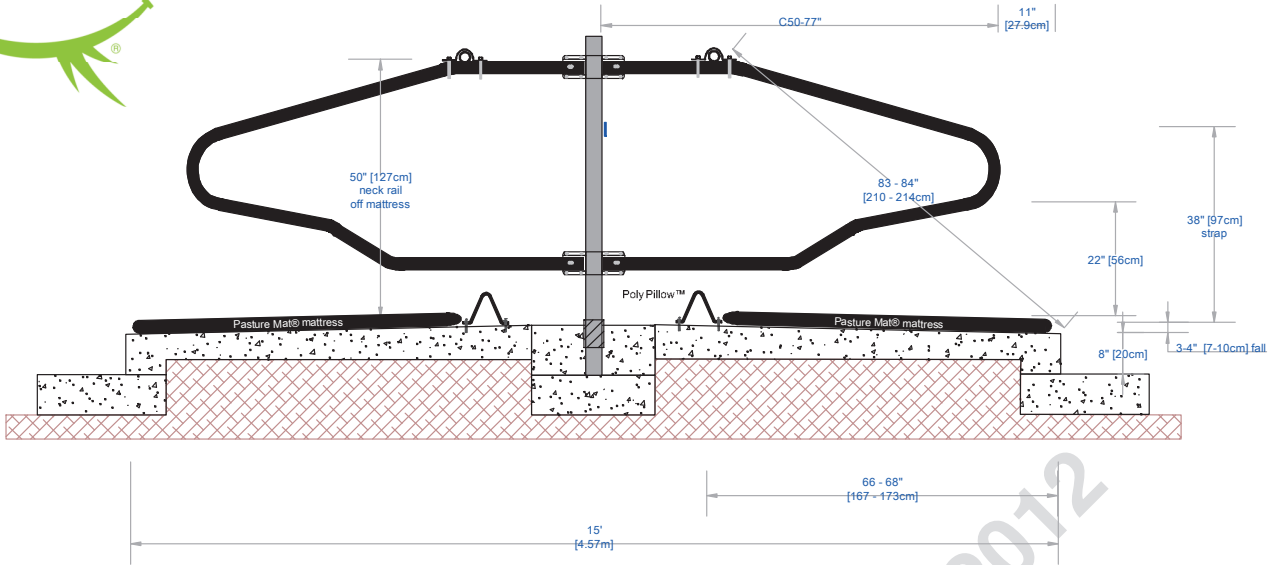



Note: Use the protective post sleeve and dent the post first to prevent it turning in the concrete



TITLE: Post Mounted cubicles	REVISION:
DETAILS: C50-77" for 8ft [2.44m] single row and 15ft [4.57m] head to head	
DATE:	SCALE: Scale: 1:35
 WILSON AGRICULTURE Dairy Housing Specialists www.wilsonagri.co.uk	DRAWN BY: Ivor Davey ivor@wilsonagri.co.uk

C-50™

The Adjustable Cow Stall

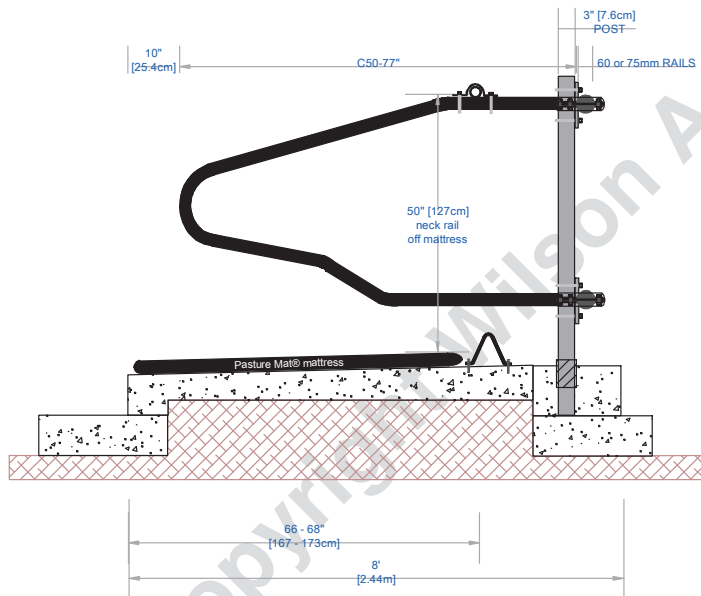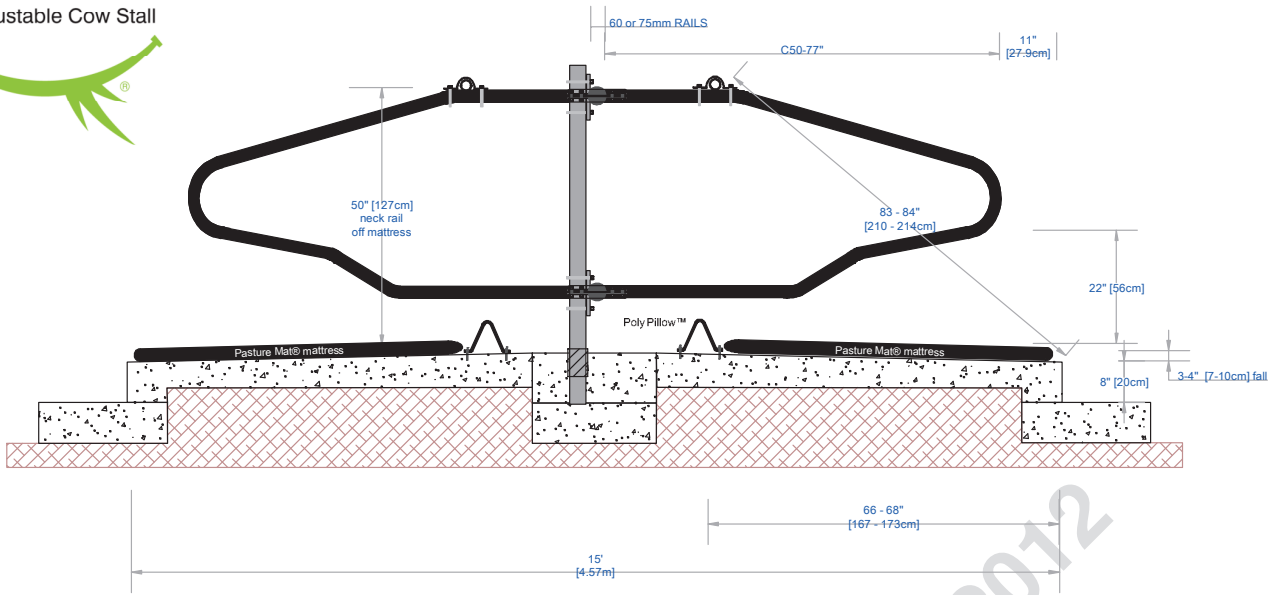

NOTES:

Adjust measurements according to different bed lengths.

The back of the cubicle needs to be between 6 & 14 inches [15 & 36cm] from the heel curb.

RAILS CAN BE EITHER 75mm OR 60mm DEPENDING ON SPAN REQUIRED.

RAILS CAN BE FIXED TO STANCHIONS IF AVAILABLE.

RAILS ARE NOT PREFERRED IF MAXIMISING COW COMFORT. WE PREFER POST OR FLOOR MOUNTED CUBICLES.

TITLE: Rail Mounted cubicles		REVISION:
DETAILS: C50-77" for 8ft [2.44m] single row and 15ft [4.57m] head to head		
DATE:	SCALE: Scale: 1:35	DRAWN BY:
WILSON AGRICULTURE Dairy Housing Specialists www.wilsonagri.co.uk		Ivor Davey ivor@wilsonagri.co.uk